


## PARTS BREAKDOWN

Call 1.800.221.9705 for questions concerning performance of the product or other inquiries.

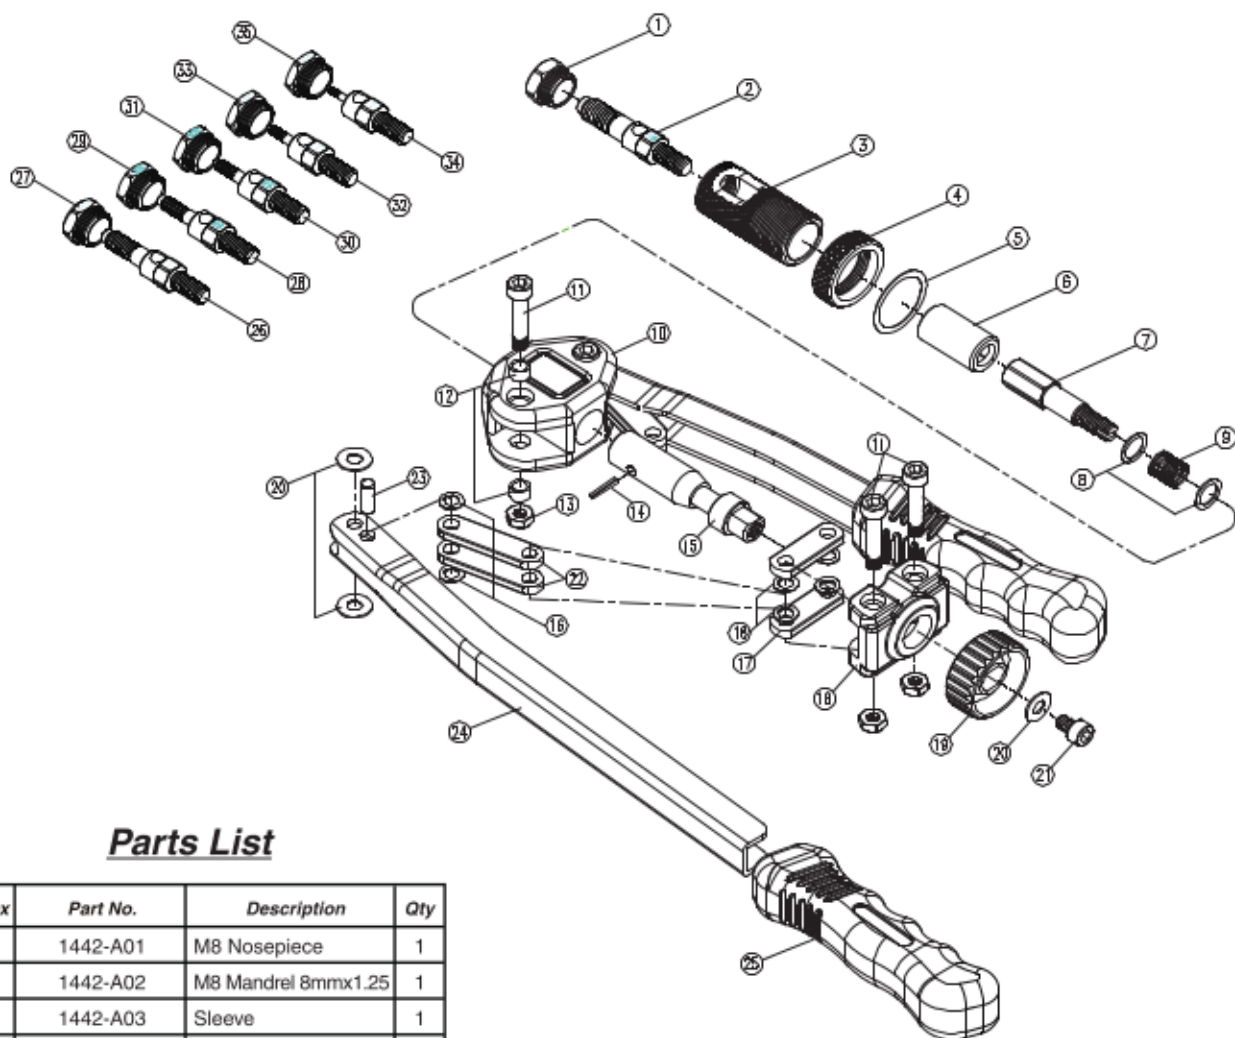

### Parts List

Index	Part No.	Description	Qty
1	1442-A01	M8 Nosepiece	1
2	1442-A02	M8 Mandrel 8mmx1.25	1
3	1442-A03	Sleeve	1
4	1442-A04	Adjusting Nut	1
5	1442-A05	Spacer	1
6	1442-A06	Hexagonal Sleeve	1
7	1442-A07	Riveting Bar	1
8	1442-A08	Spacer	2
9	1442-A09	Spring	1
10	1442-16	Main Body	1
11	1442-06	Screw	4
12	1442-04	Bushing	4
13	1442-03	Locknut	4
14	1442-A14	Opening Spring Pins	1
15	1442-A15	Pulling Bar	1
16	1442-07	Metal Washer	8
17	1442-09	Connecting Bar	2
18	1442-15	Main Shaft Drive	1
19	1442-13	Knob	1
20	1442-A20	Spacer	5

Index	Part No.	Description	Qty
21	1442-11	Screw	1
22	1442-08	Connecting Bar	4
23	1442-10	Bushing	2
24	1442-02	Handle	2
25	1442-01	Grip	2
26	1442-A26	Mandrel 5/16-18	1
27	1442-A27	5/16-18 Nosepiece	1
28	1442-A28	M6 Mandrel 6mmx1.0	1
29	1442-A29	M6 Nosepiece	1
30	1442-A30	M5 Mandrel 5mmx0.8	1
31	1442-A31	M5 Nosepiece	1
32	1442-A32	Mandrel 1/4-20	1
33	1442-A33	1/4-20 Nosepiece	1
34	1442-A34	Mandrel 10-24	1
35	1442-A35	10-24 Nosepiece	1