

4077 - Champ Adjustable 7' Paint Hanger

CHAMP[®]

Frame Straightening Equipment Inc.



Made In USA



Black Painted Steel Tubing

WARNING Read all assembly instructions completely before attempting to assemble unit.
Improper assembly could result in damage to unit or injury to user.

Auto Body Toolmart





Champ Frame Straightening Equipment, Inc.


2545 Millennium Dr., Elgin IL, 60124 (800) 382-1200

www.autobodytoolmart.com


Parts List

- A** (2) Wheel Bases
- B** (4) Wheels (2 Locking)
- C** (2) 41" Bottom Support Beams
- D** (1) 12" Bottom Support Beam Connector
- E** (2) 46" Uprights
- F** (2) 48" Uprights
- G** (2) Top Cross Beams
- H** (1) 20" Top Cross Beam Center Support
- I** (6) Hooks
- J** (4) End Caps
- K** (6) Bolts w/Handle
- L** (4) Bolts
- M** (4) Nuts and (4) Washers
- N** (2) Locking Pins

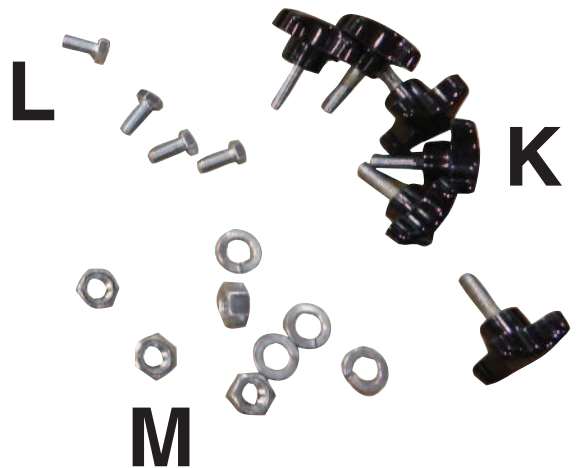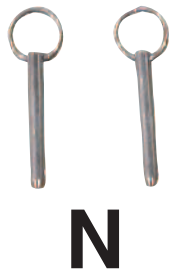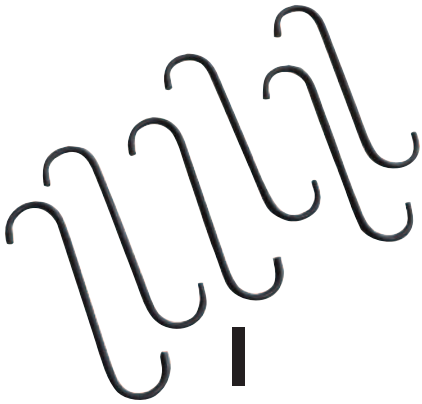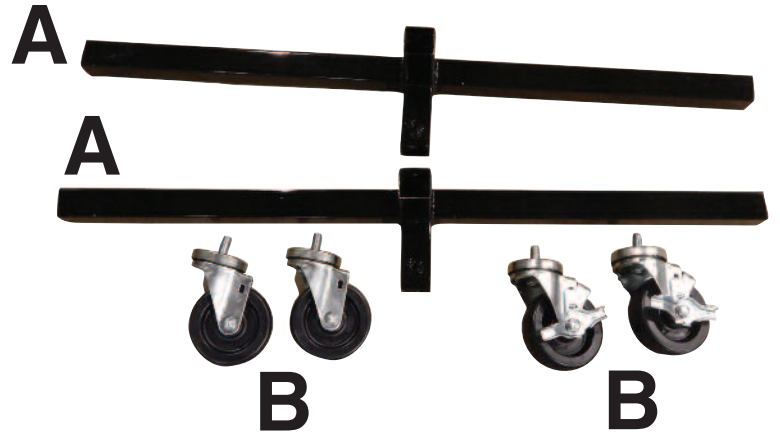


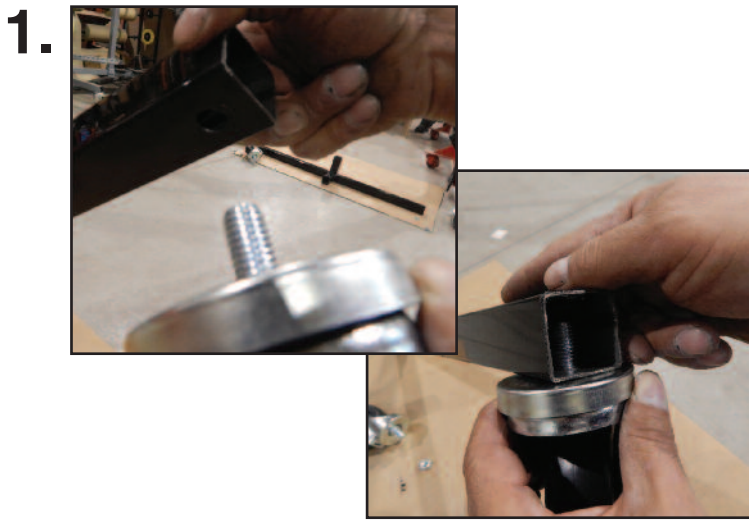


Insert the bolt of each wheel (B) into the bottom of both wheel bases (A)

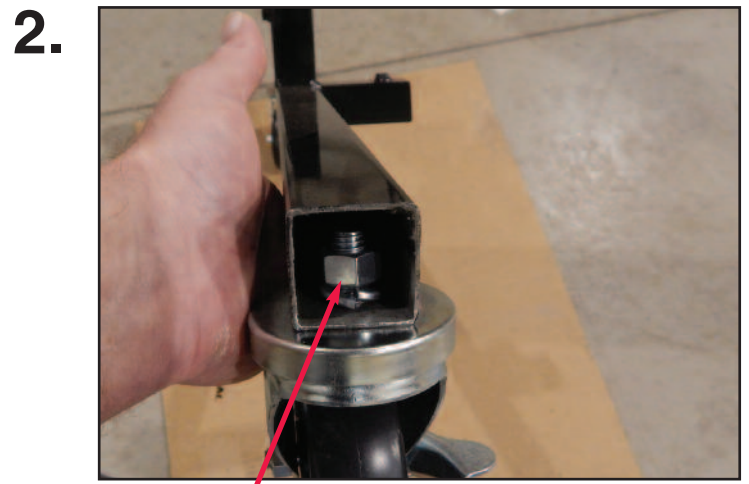

Secure the wheels (B) with supplied washers and nuts

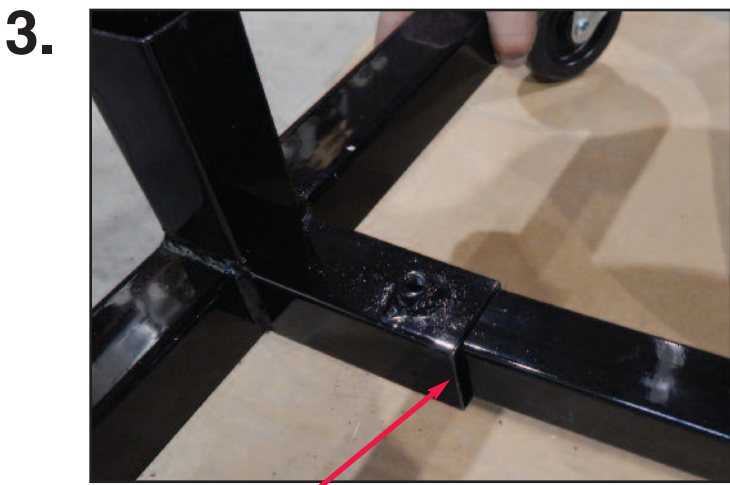

Slide the 41" bottom support beam (C) into the wheel base (A), as far as it will go. Both bottom support beams have welded nuts on them. Make sure these welded nuts are facing up. Repeat this step with the other side.

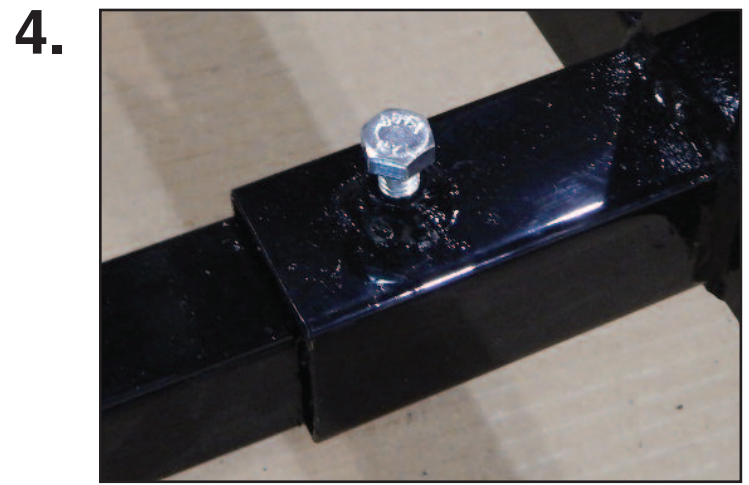

Secure the bottom support beams (C) to the wheel bases (A) with supplied bolts.




Slide the 12" bottom support connector (D) into each end of the bottom support beams (C)




Secure the bottom support connector (D) and the bottom support beams (C) by screwing the supplied bolts into the welded nuts

7.

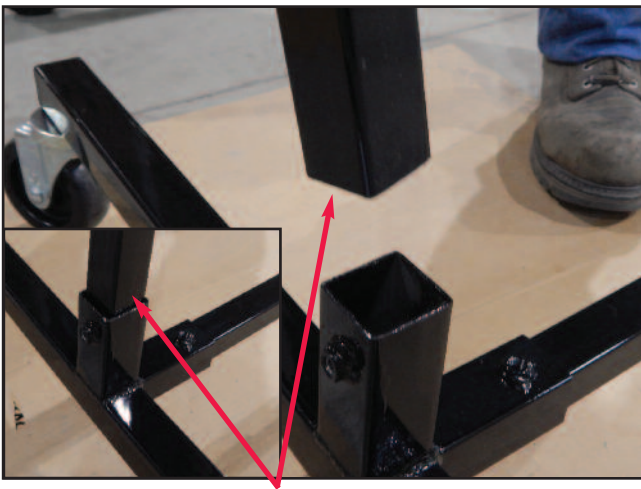


Slide the 46" upright (E) into the wheel base (A). Make sure the the pre-drilled hole in the upright (E) is at the top. Repeat this step to the other side.

8.

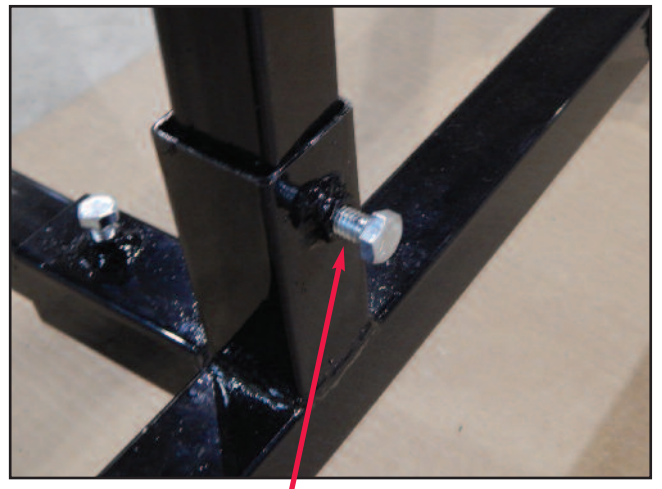

Secure the 46" uprights (E) to the wheel base (A) using supplied bolts (L). Do this to both sides.

9.

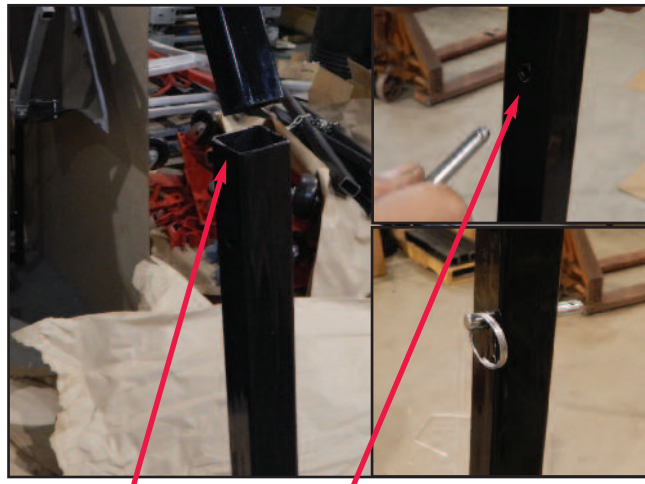


Slide the 48" upright (F) into the 46" upright (E). Align the holes of both uprights and insert locking pin (N). Do this step to both sides.

10.



Slide the top cross beams (G) on to the 48" upright (F) and secure with supplied bolt. Do this to both sides.

11.

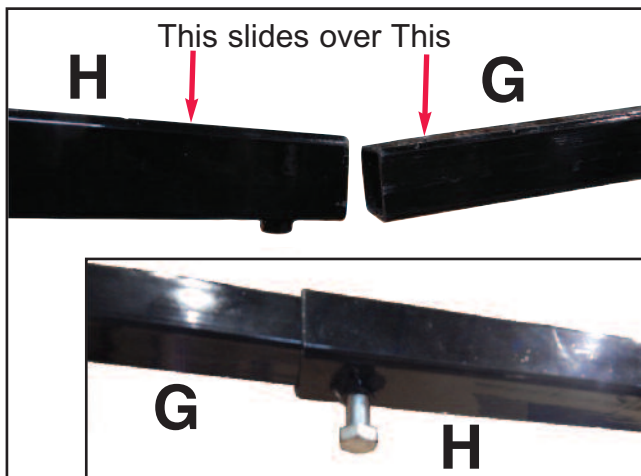

Slide the 20" top cross beam center support (H) **Over** the ends of both top cross beams (G) and secure with supplied bolts. The hooks can now be hung from the top cross beams (G)

12.



Install end caps (J) on the ends of the wheel bases (A).